

MAINTENANCE SCHEDULE

Maintenance operations:

I = Inspect, correct or replace as necessary
R = Replace, change or lubricate

DESCRIPTION	KM x1,000	1	5	10	15	20	25	30	35	40	45	50	55	60	65	70	75	80	85	90	95	100
	MONTHS	1	3	6	9	12	15	18	21	24	27	30	33	36	39	42	45	48	51	54	57	60
PARTS REPLACEMENT																						
ENGINE OIL		R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R
OIL FILTER		R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R
DRAIN GASKET		R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R
BRAKE FLUID										R												
AIRCON FILTER										R									R			
FUEL FILTER										R									R			
TRANSMISSION FLUID										R									R			
TRANSMISSION GASKET										R									R			
COOLANT										R									R			
RAD. DRAIN PLUG O RING										R									R			
AIR FILTER		I	I	I	I	I	I	I	I	R	I	I	I	I	I	I	I	R	I	I	I	I
SPARK PLUG (STANDARD @ every 20,000km) (IRADIUM @ 100,000km)						R				R									R			R
WASHER FLUID		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
BRAKE MAINTENANCE PKG				R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R
ENGINE																						
ENGINE COOLING SYSTEM		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
DRIVE BELT CONDITION		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
AIR CONDITIONING REFRIGERANT				I		I		I		I		I		I		I		I		I		I
EXHAUST PIPE AND MOUNTINGS						I				I									I			I
CHASSIS & BODY																						
BRAKE FLUID LEVEL		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
BRAKE PEDAL FREEPLAY		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
PARKING BRAKES				I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
BRAKE LINE PIPES AND HOSES		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
BRAKE PADS AND DISCS				I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
STEERING WHEEL & LINKAGE				I		I		I		I		I		I		I		I		I		I
UNDERCARRIAGE BOLTS AND NUTS		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
TRANSMISSION FLUIDS				I		I		I		I		I		I		I		I		I		I
DIFFERENTIAL OIL (when applicable)										R									R			
TYRE CONDITION AND INFLATION		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
BALL-JOINTS AND DUST COVER						I				I									I			I
ENGINE/TRANSMISSION MOUNTINGS						I				I									I			I
FRONT AND REAR SUSPENSION						I				I									I			I
DRIVESHAFT BOOTS						I				I									I			I
FUEL TANK CAP, LINES AND FUEL CONNECTIONS										I									I			I
LUBRICATE PROPELLER SHAFTS AND JOINTS (when applicable)				R		R		R		R		R		R		R		R		R		R
FRONT WHEEL ALIGNMENT										I									I			I
ELECTRICAL																						
BATTERY CONDITION		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
WINDSHIELD WIPER/ WASHER		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
HORN OPERATION		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
ELECTRIC MIRROR OPERATION		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
ALL POWER WINDOWS OPERATION		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
CENTRAL LOCKING OPERATION		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
AIR CONDITIONING BLOWER OPERATION		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
ALL LIGHTING SYSTEM INCLUDING INDICATORS		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I

Additional information can be found in the Owners' Manual (Maintenance & Care).